


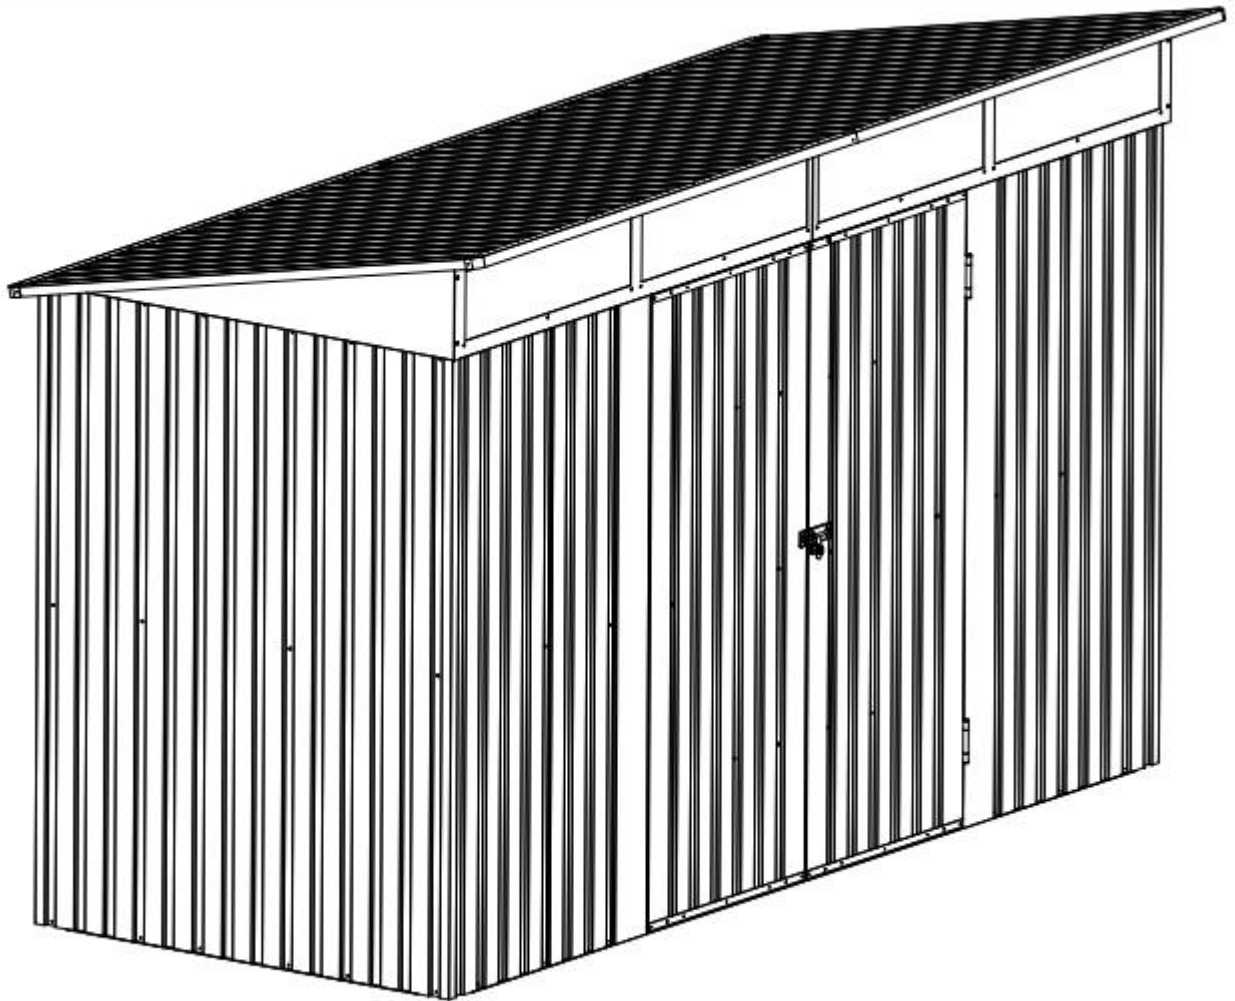











Installation Manual














For flat roof garden shed, tool storage






























1. Gather and organize all required parts prior to assembly.

2. Assemble on a flat, clean and soft surface

Item no	Reference Image	Qty
①A		2
①B		1
②		2
③		2
④B		3
⑤		4
⑥A		2
⑥B		1
⑦		2
⑧		2
⑩		3
⑫		4
⑮		4


Item no	Reference Image	Qty
⑮		2
⑰		2
⑰R		2
⑰L		2
⑳R		1
⑳L		1
㉑R		1
㉑L		1
㉑		4
㉒		1
㉓		1
⑨A		1
⑨B		1

Item no	Reference Image	Qty
(C)		8
(D)		4
(K)		2
(S1)		1
(S2)		1
(S3)		42
(S4)		222
(S5)		2
(S9)		4
(S6)		78
(S7)		78
(H6)		22
(H7)		22
(F7)		140
(F8)		28

Item no	Reference Image	Qty
(W2)		2
(W3)		2
(W4)		7
(W5)		7
(W6)		1
(W7)		1
(W8)		3
(W9)		3
(M1)		2
		1
		1
		1


1

1A x2 1B x1 4B x2 S4 x8

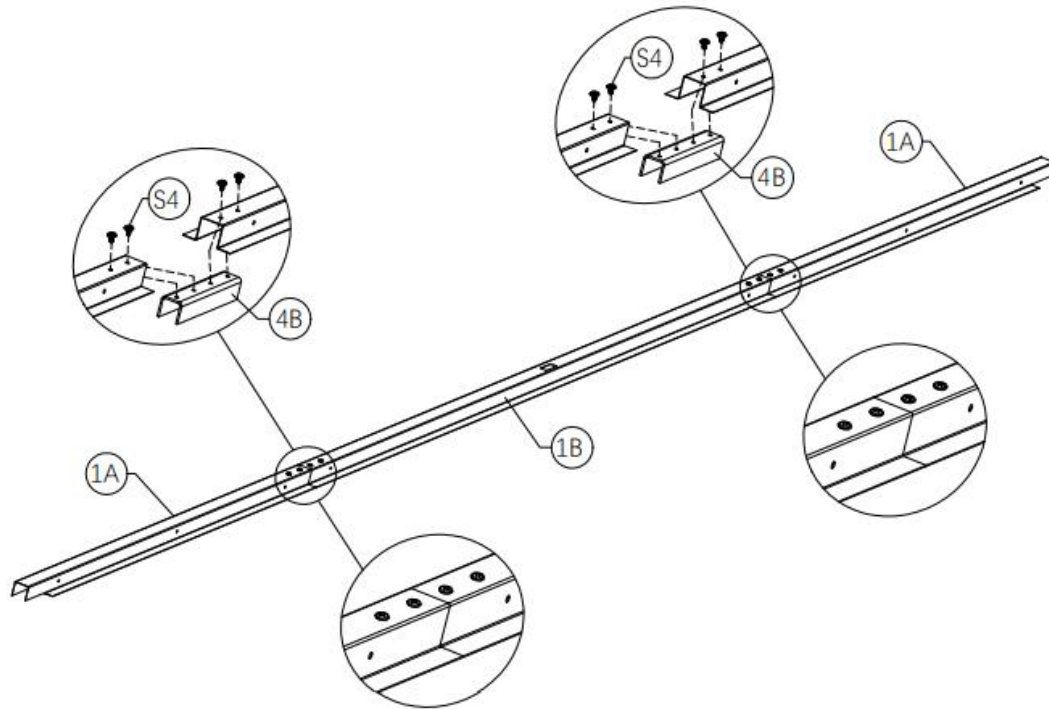


2

3 x2 4B x1 S4 x4

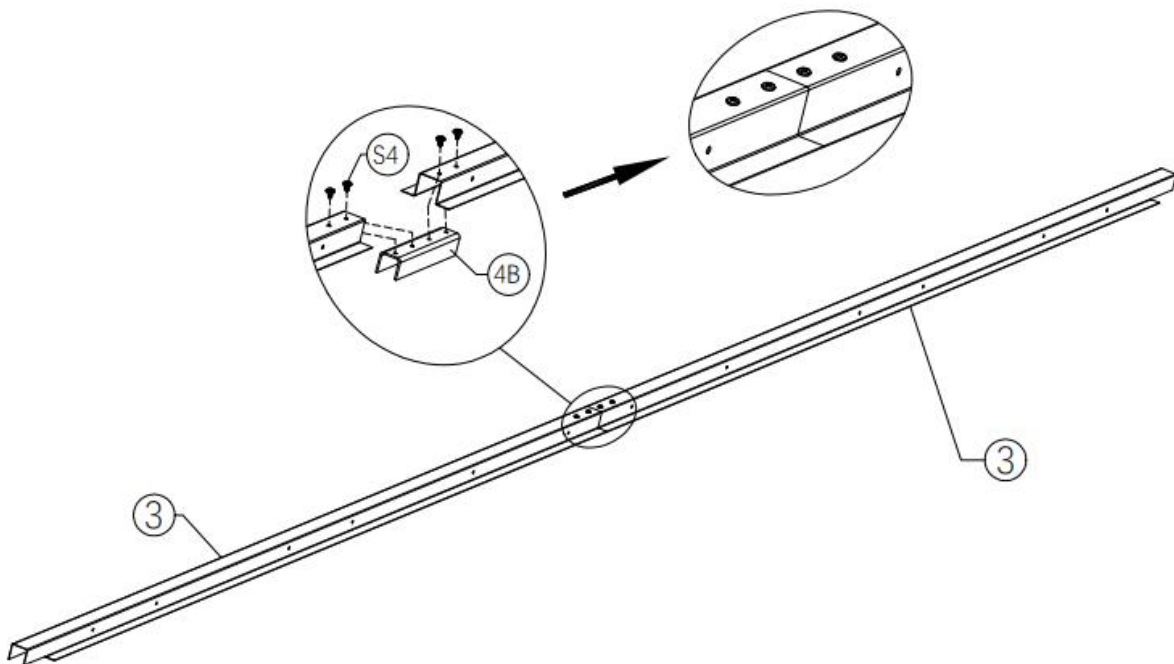


3

② X 2 ③ X 4 ④ X 16

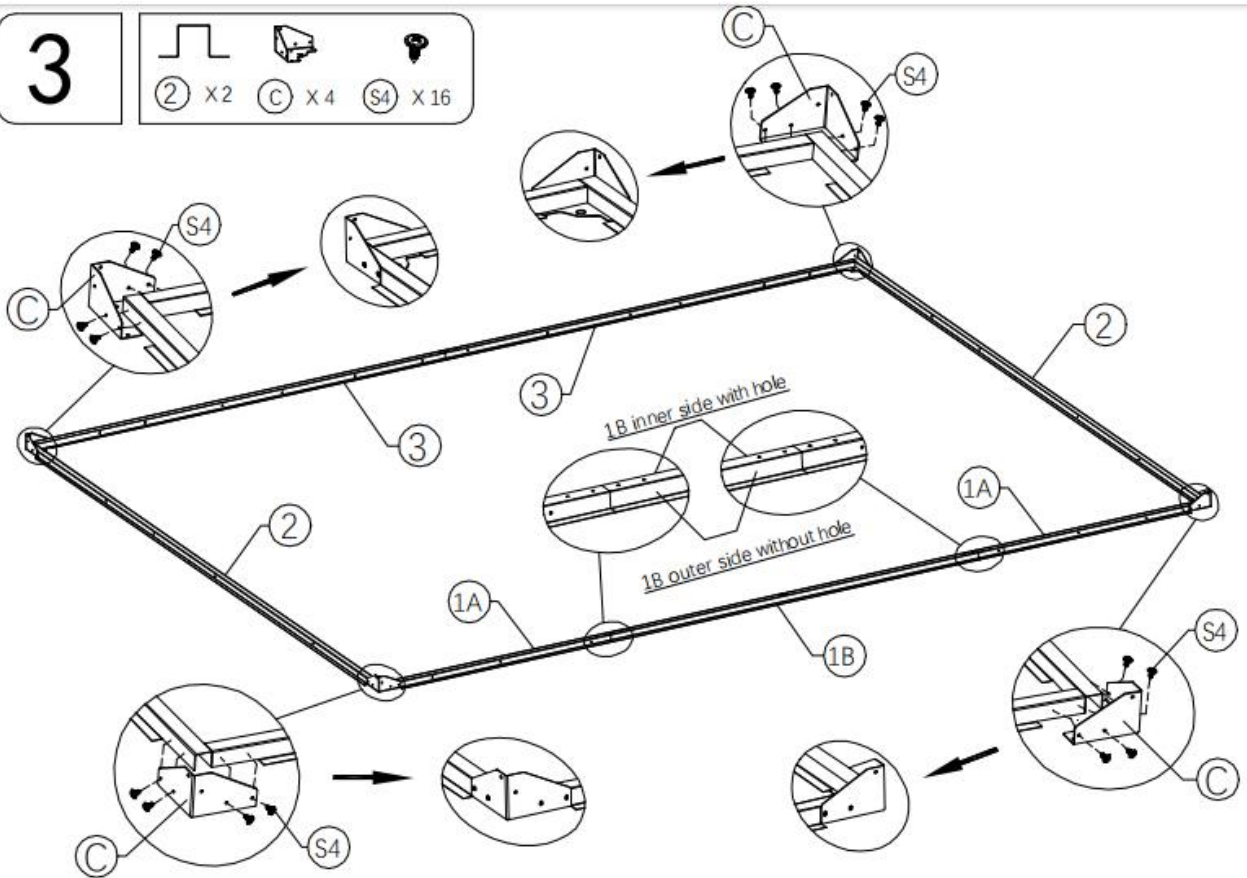



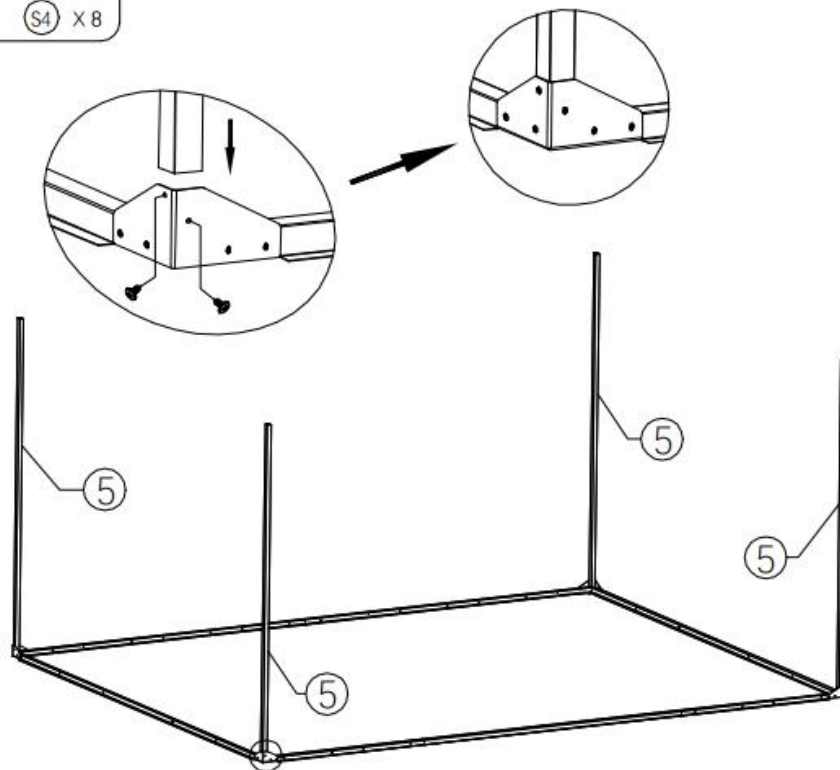


4

⑤ X 4 ④ X 8






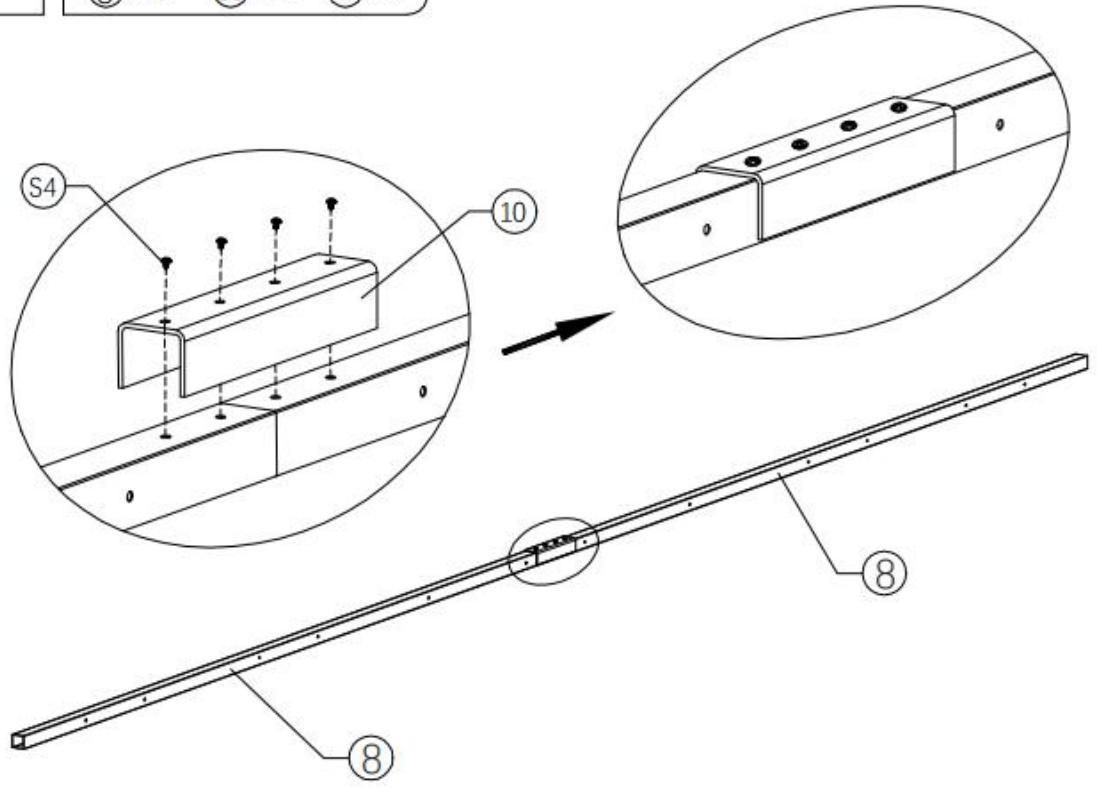
5

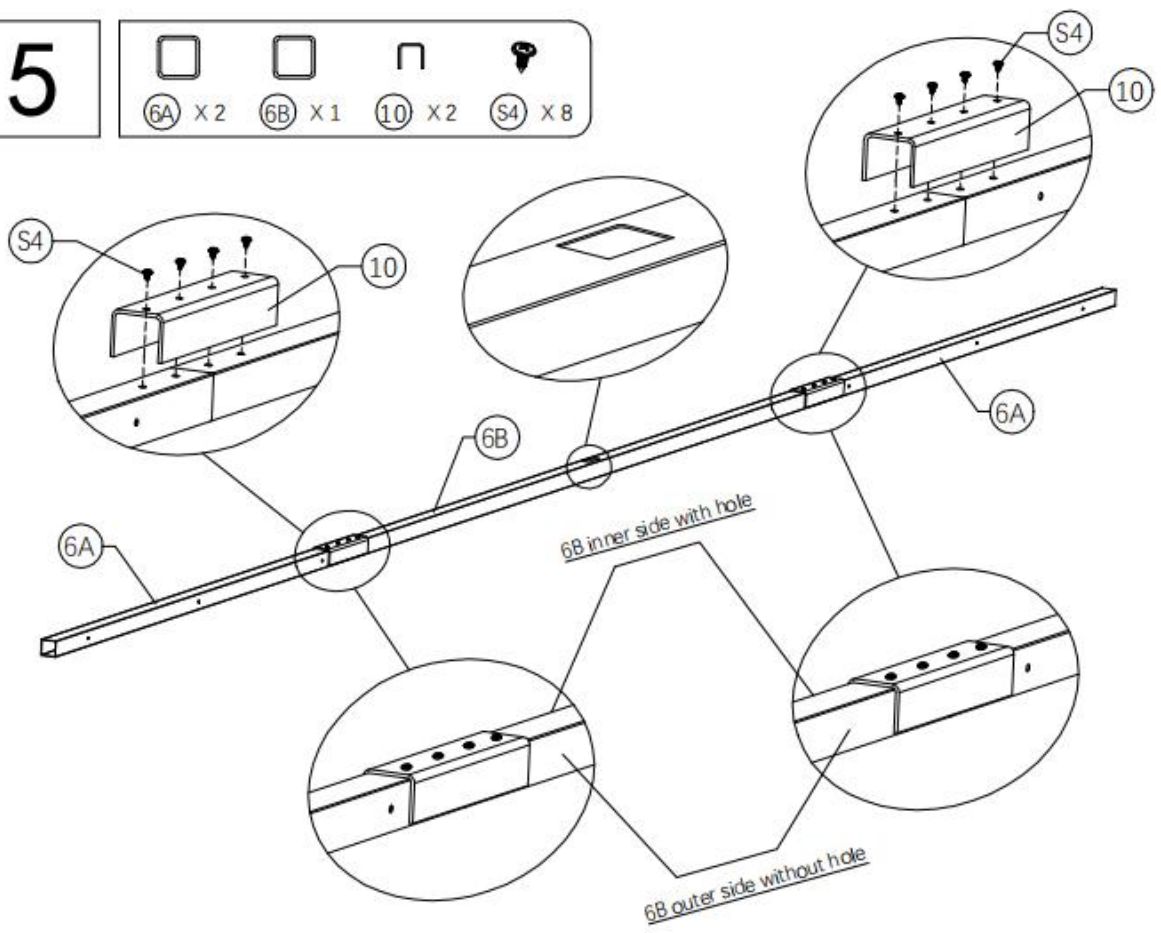-  (6A) x 2
-  (6B) x 1
-  (10) x 2
-  (S4) x 8




6

-  (8) x 2
-  (10) x 1
-  (S4) x 4




7

⑦ x2 ③ x4 ④ x32


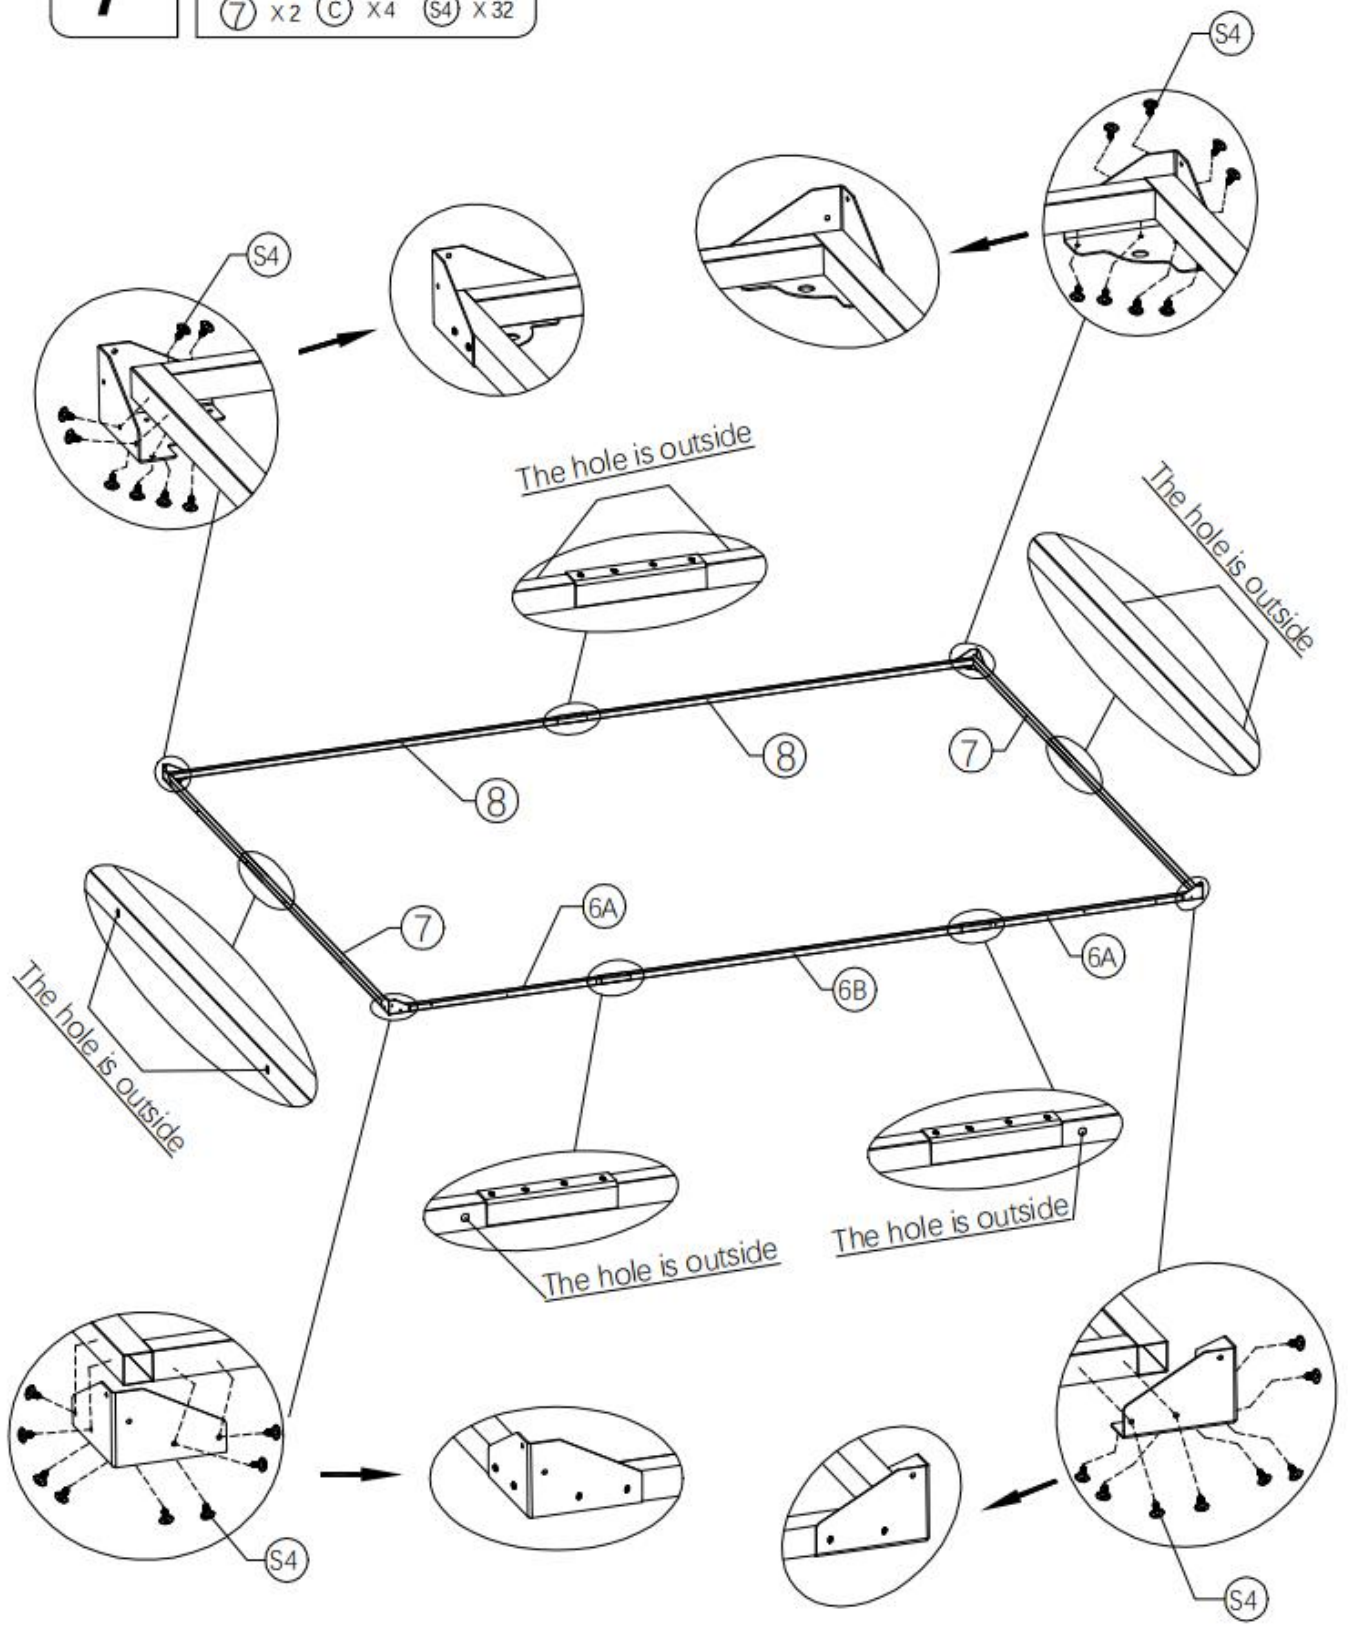


8



S4 X 8

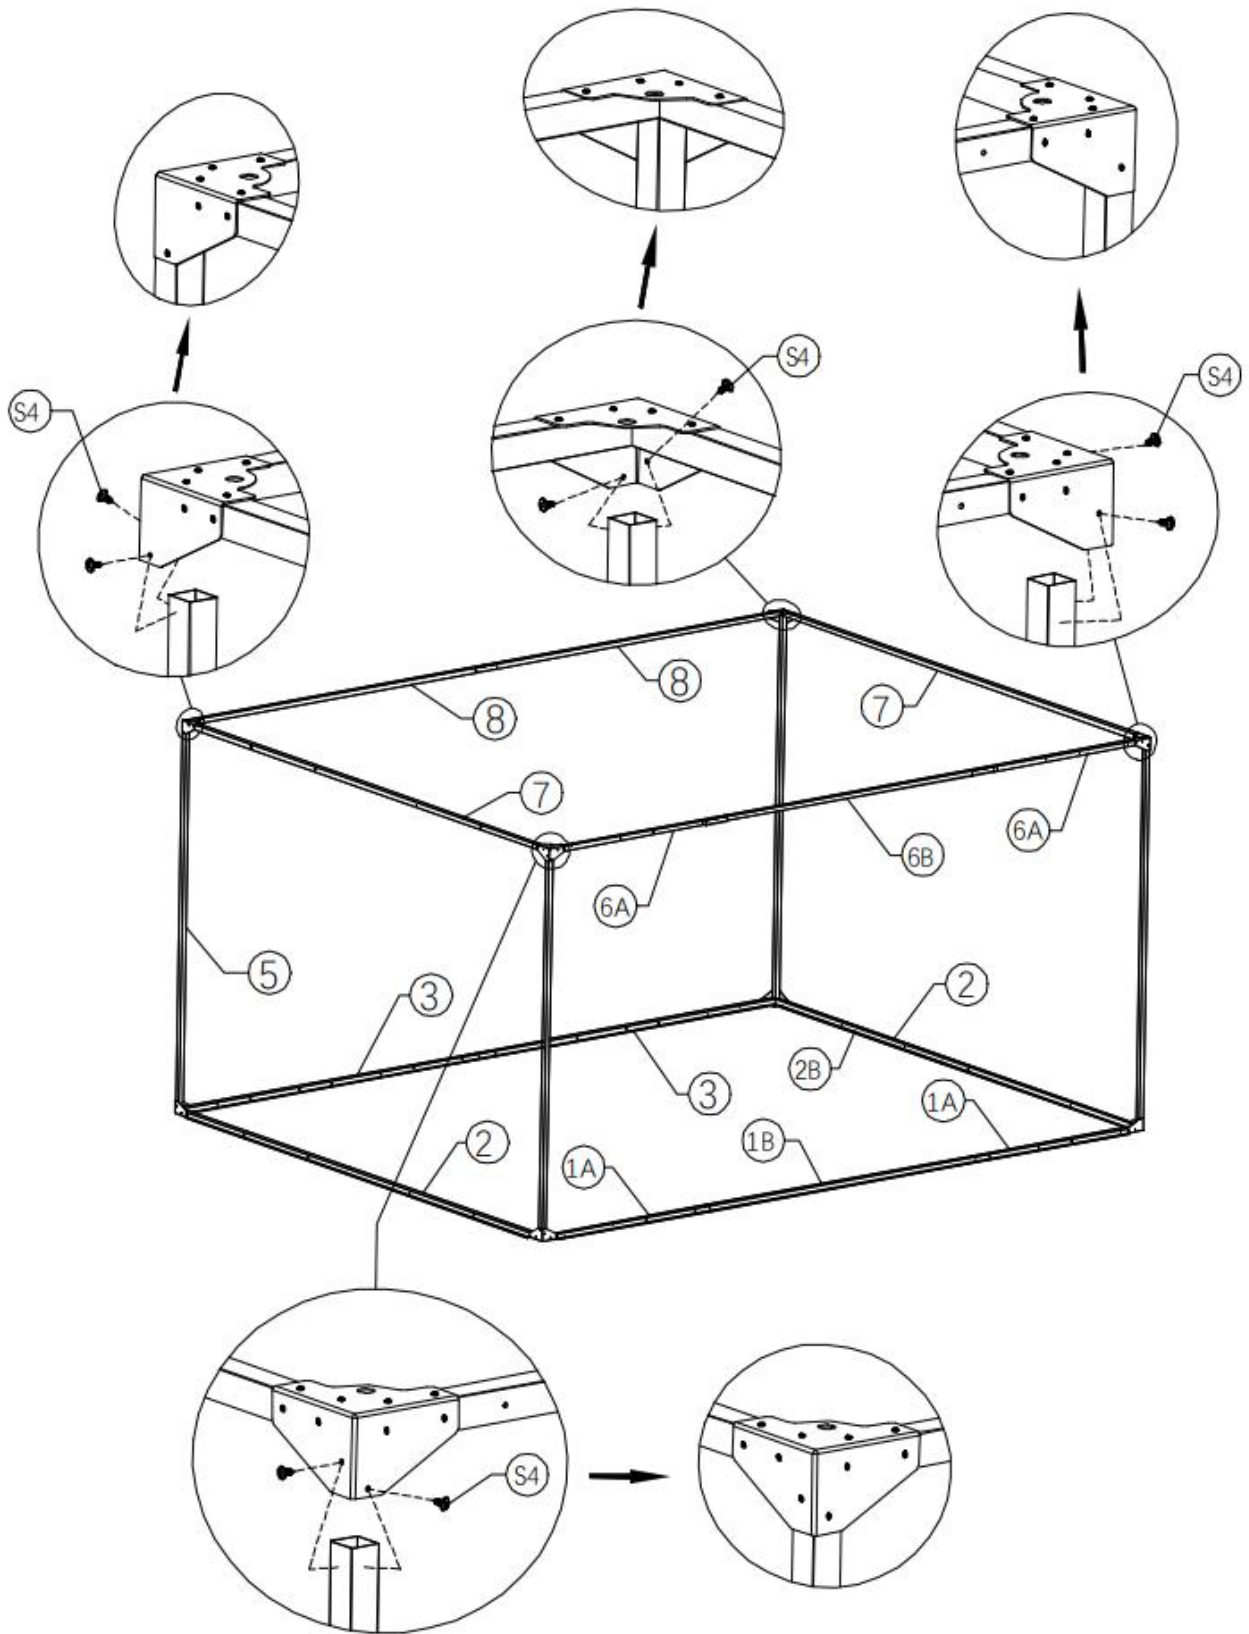

9

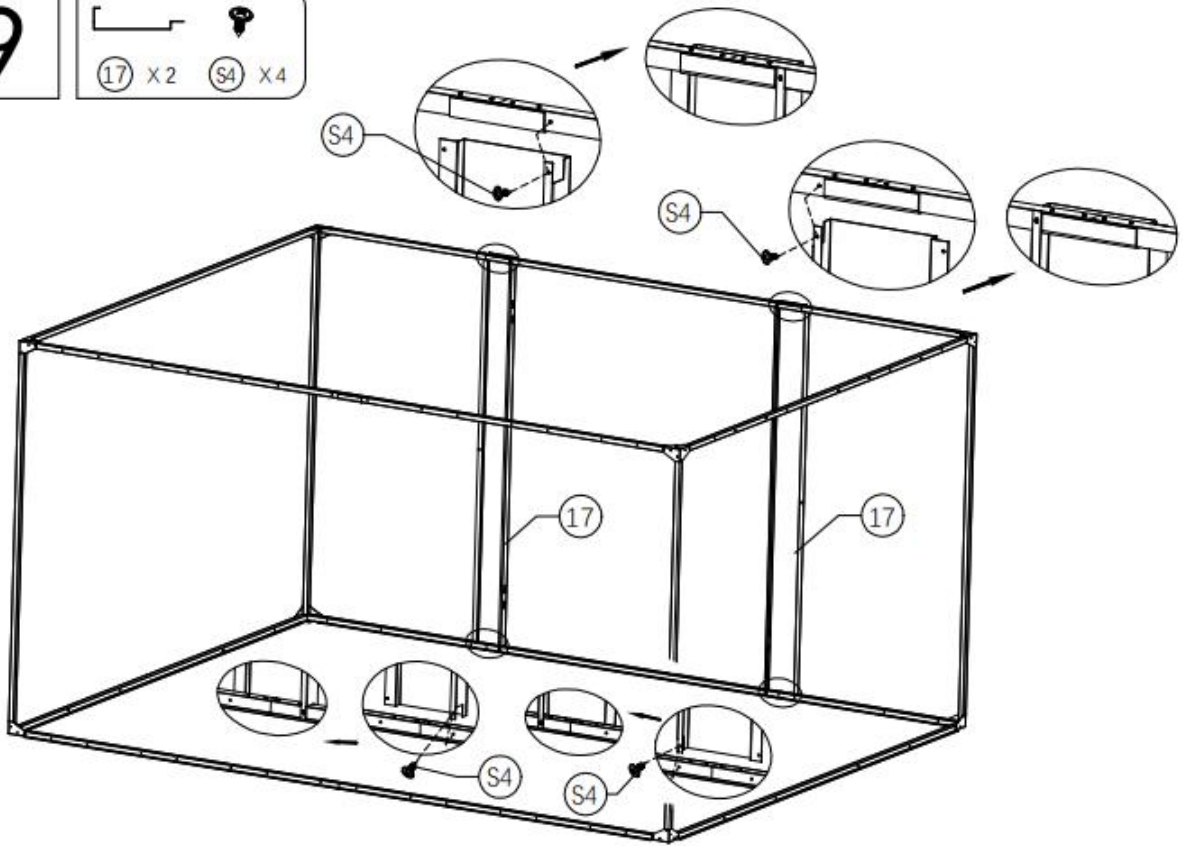

10

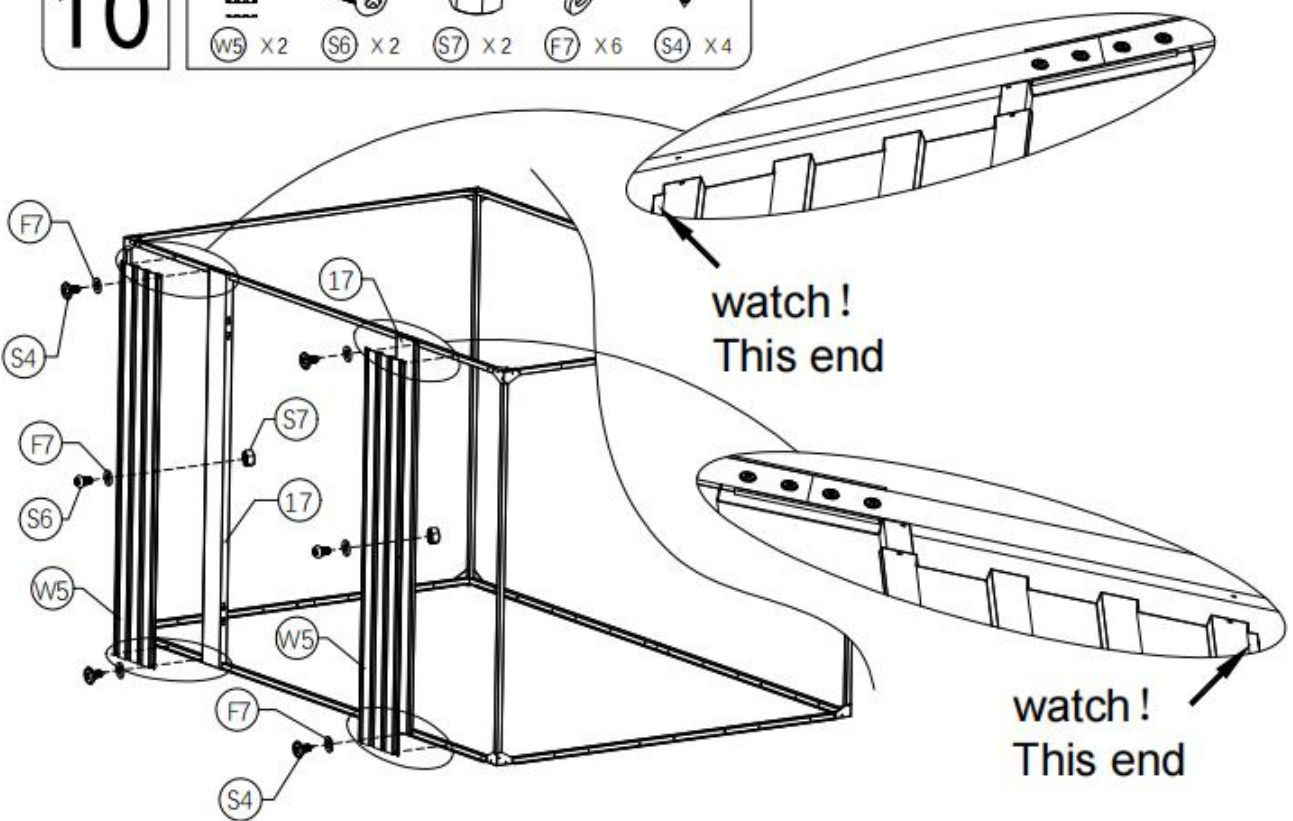

11



W2 X1



W4 X2



W5 X1



S6 X4



S7 X4





F7 X18



S4 X14

watch!
This end

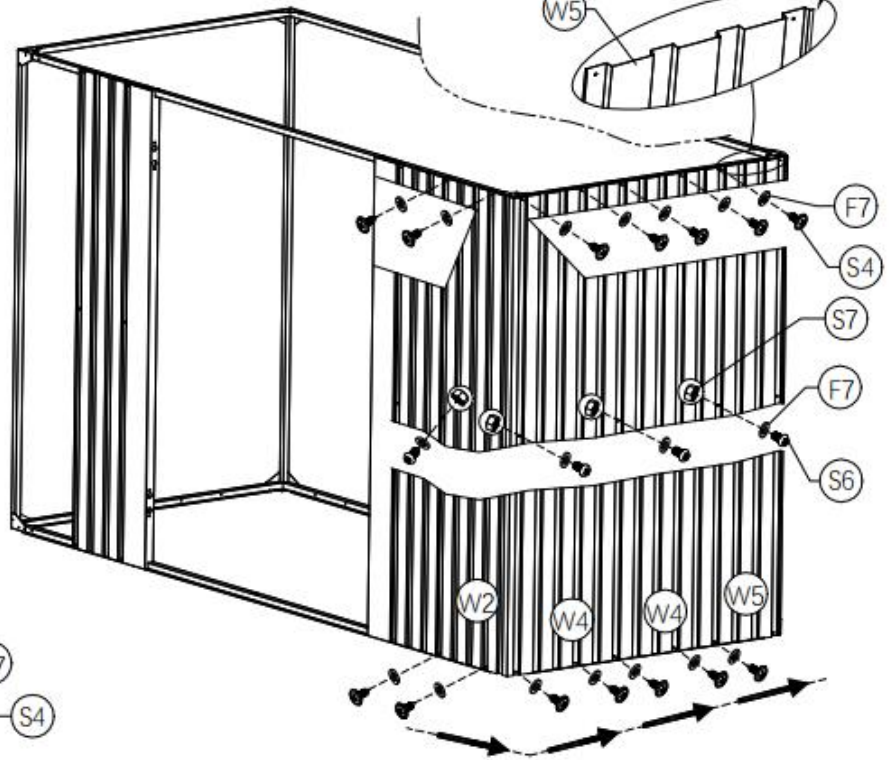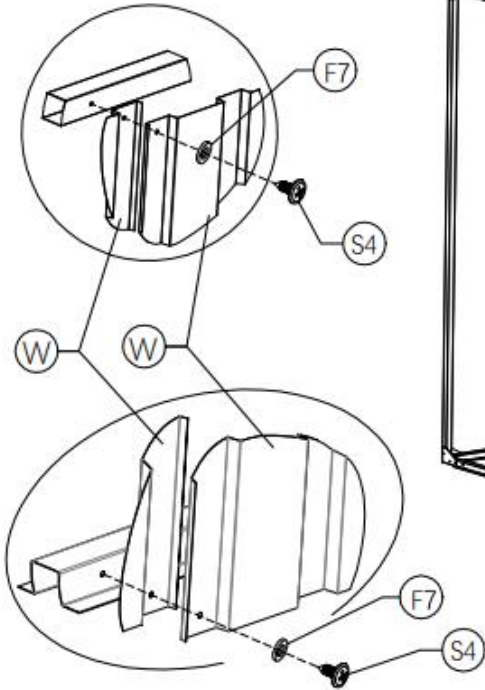

12



W2 X1



W4 X2



W5 X1



S6 X4



S7 X4





F7 X18




S4 X14


watch!
This end

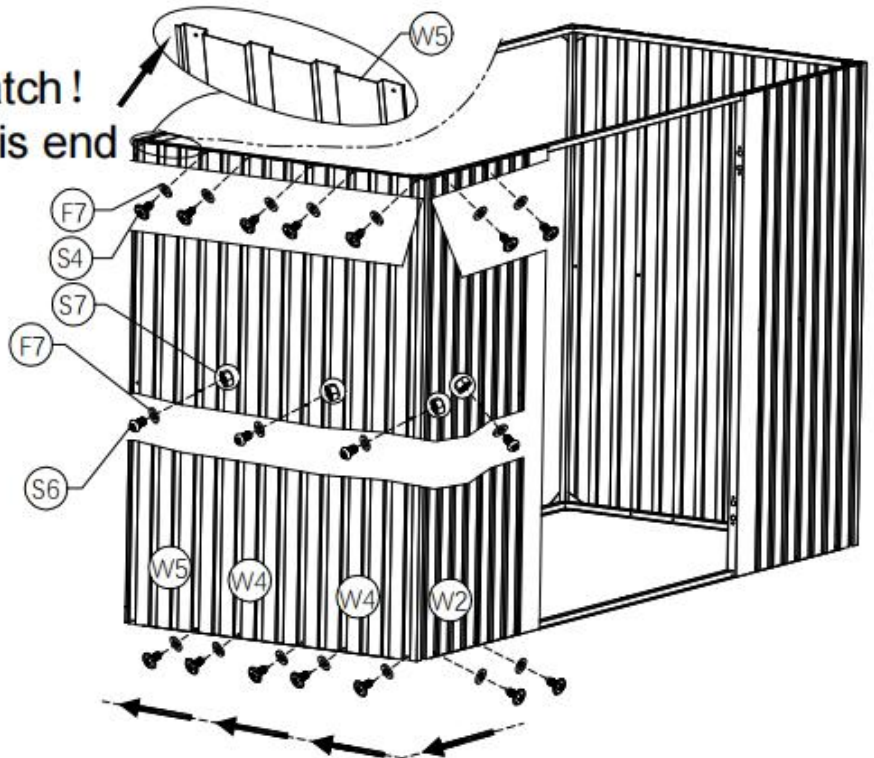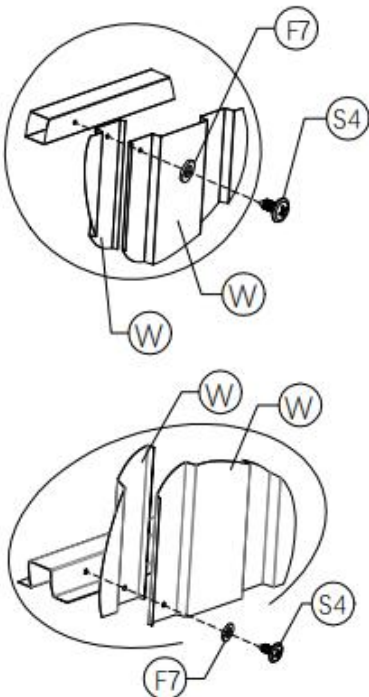

13



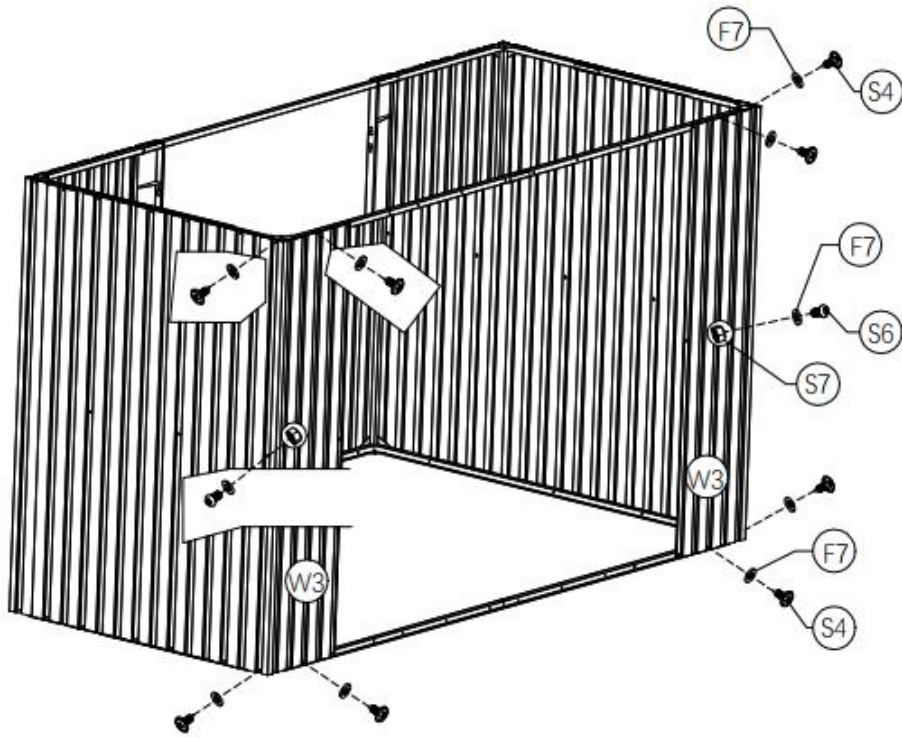


14

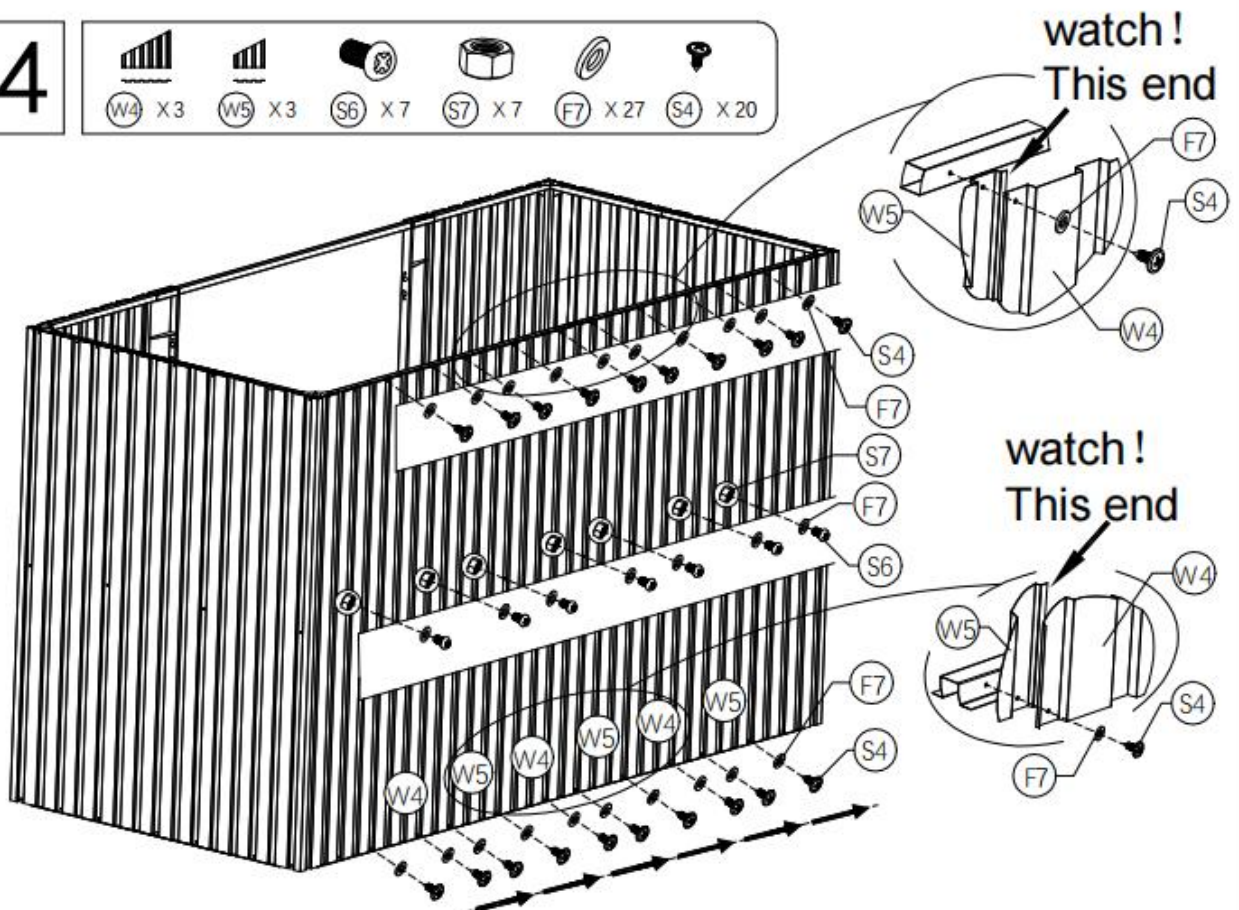


15

- 21R X1
- 21L X1
- S4 X8

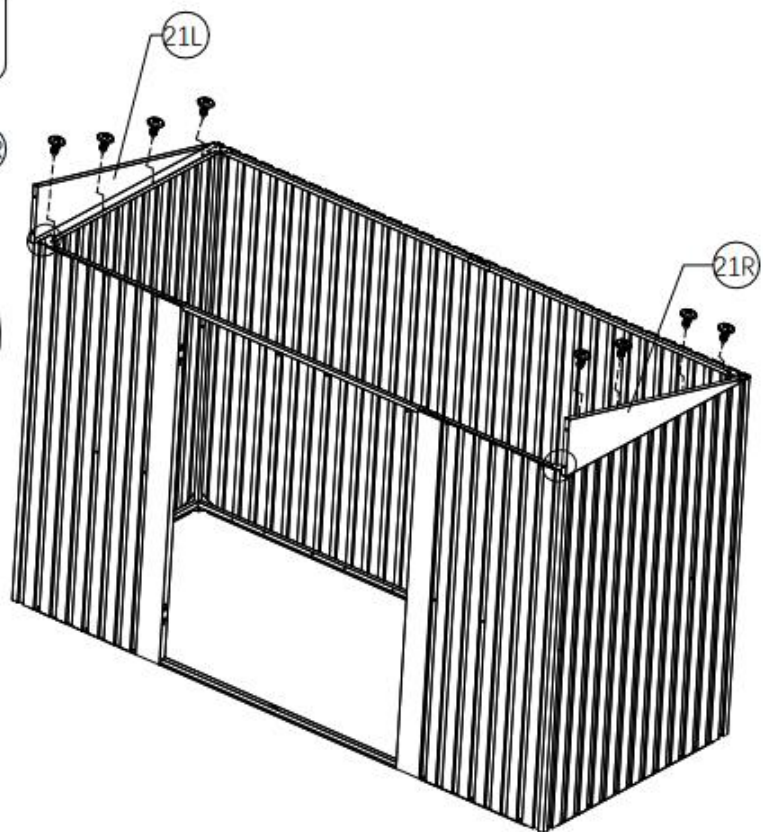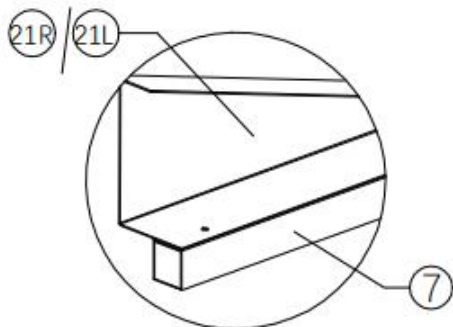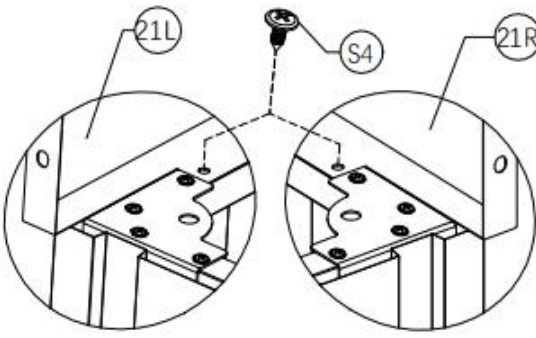


16

- 9A X1
- 9B X1
- 12 X4
- S6 X24
- S7 X24

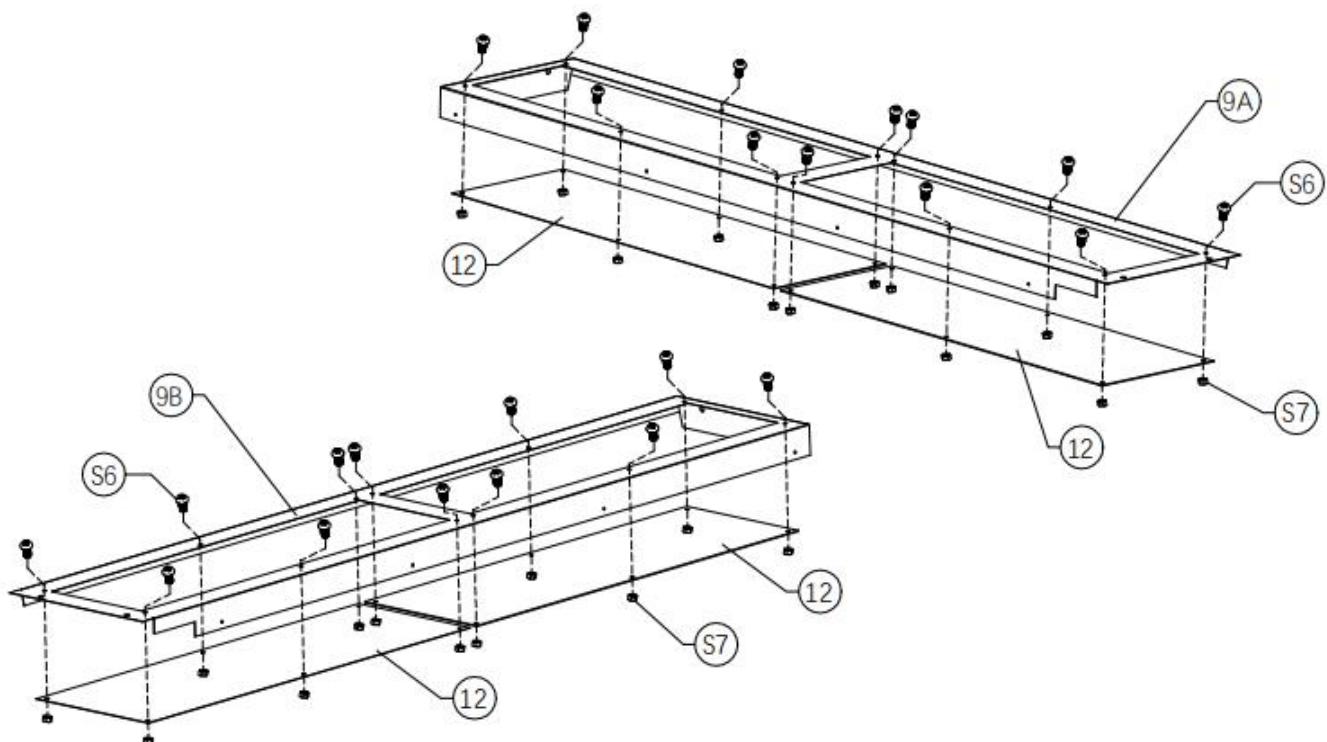


17

(H6) X 6 (H7) X 6 (S4) X 8

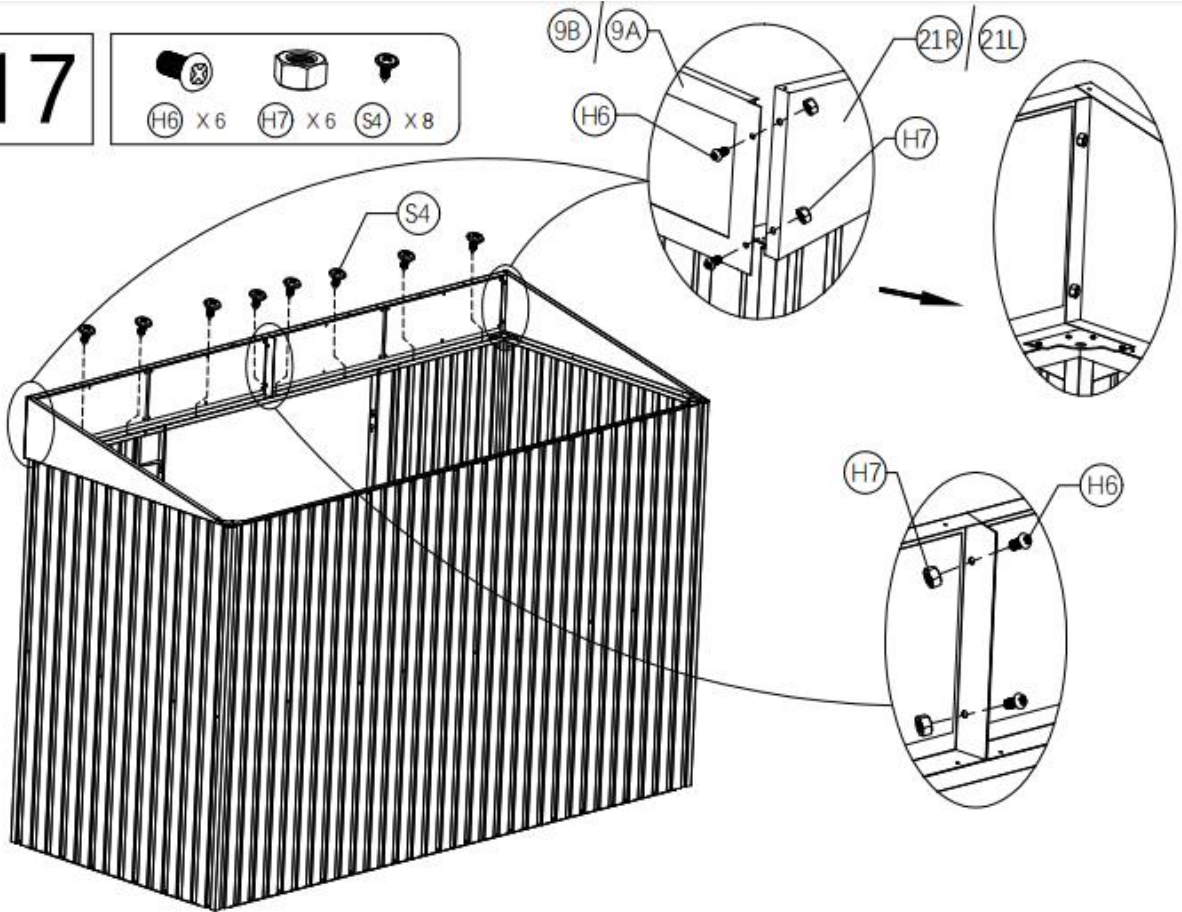


18

(W6) X 1 (W7) X 1 (W8) X 3 (W9) X 3 (S6) X 7 (S7) X 7 (F7) X 20 (S4) X 13

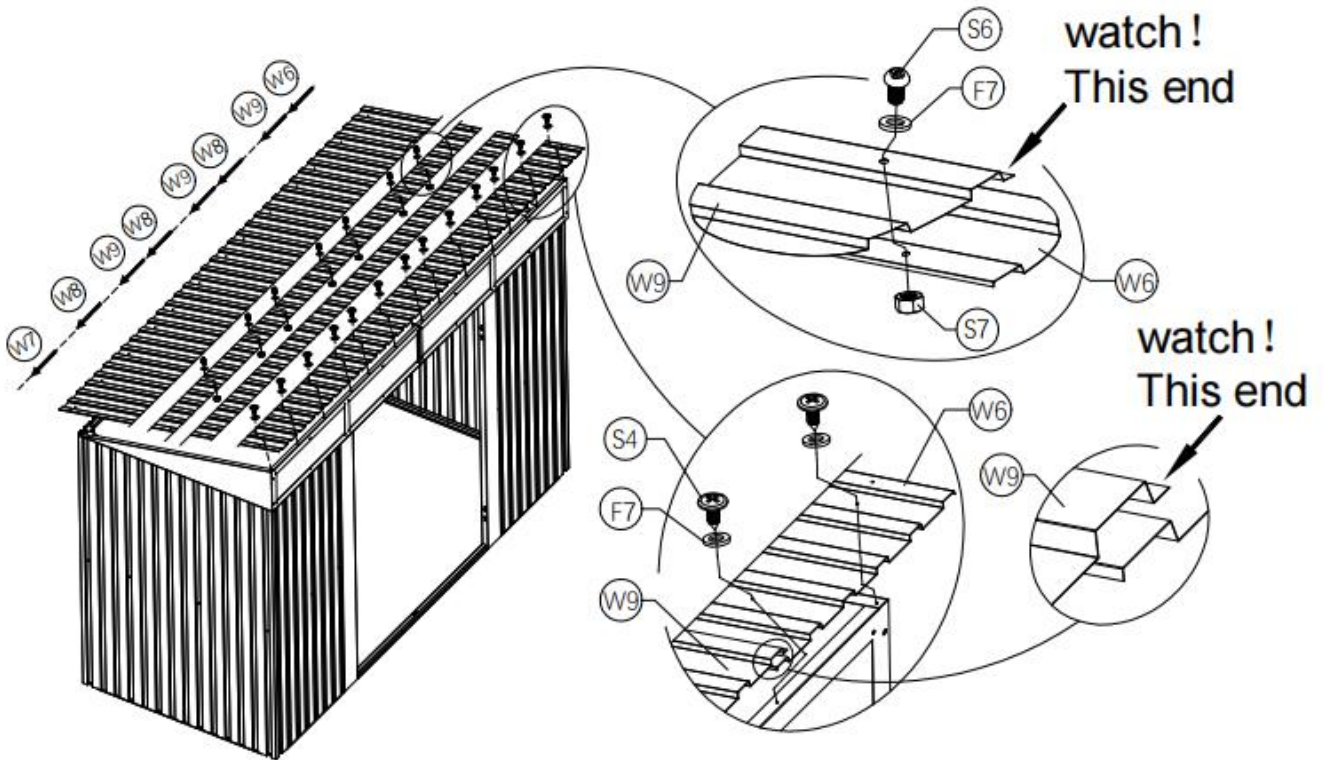


19

F7 X13 S4 X13

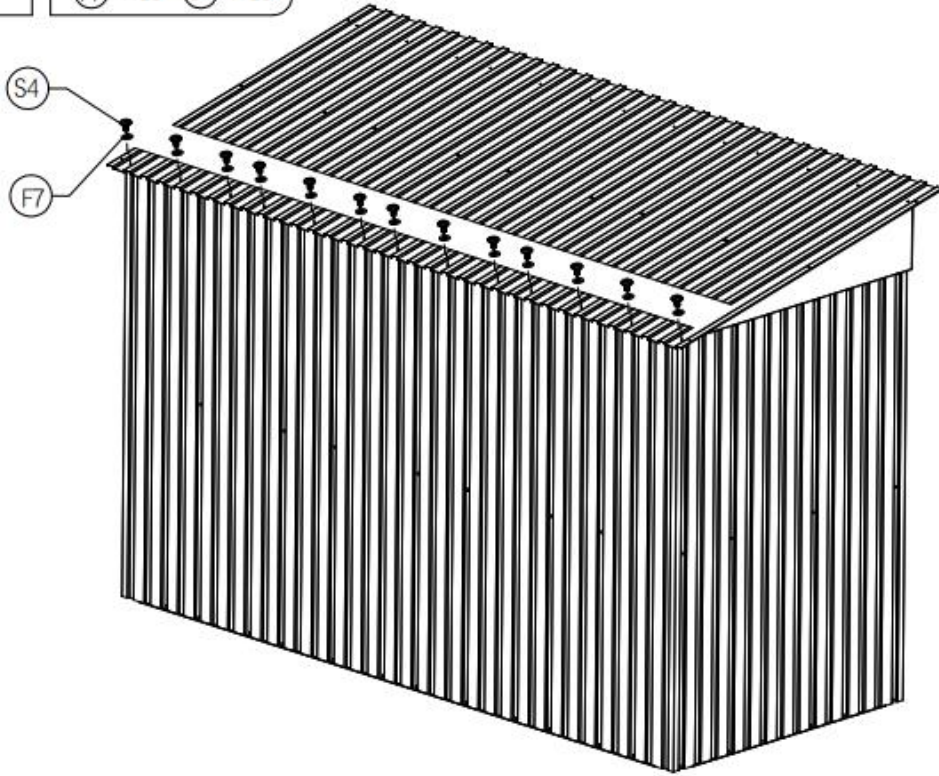

20

19R X2 19L X2 20R X1 20L X1 F7 X28 S4 X28

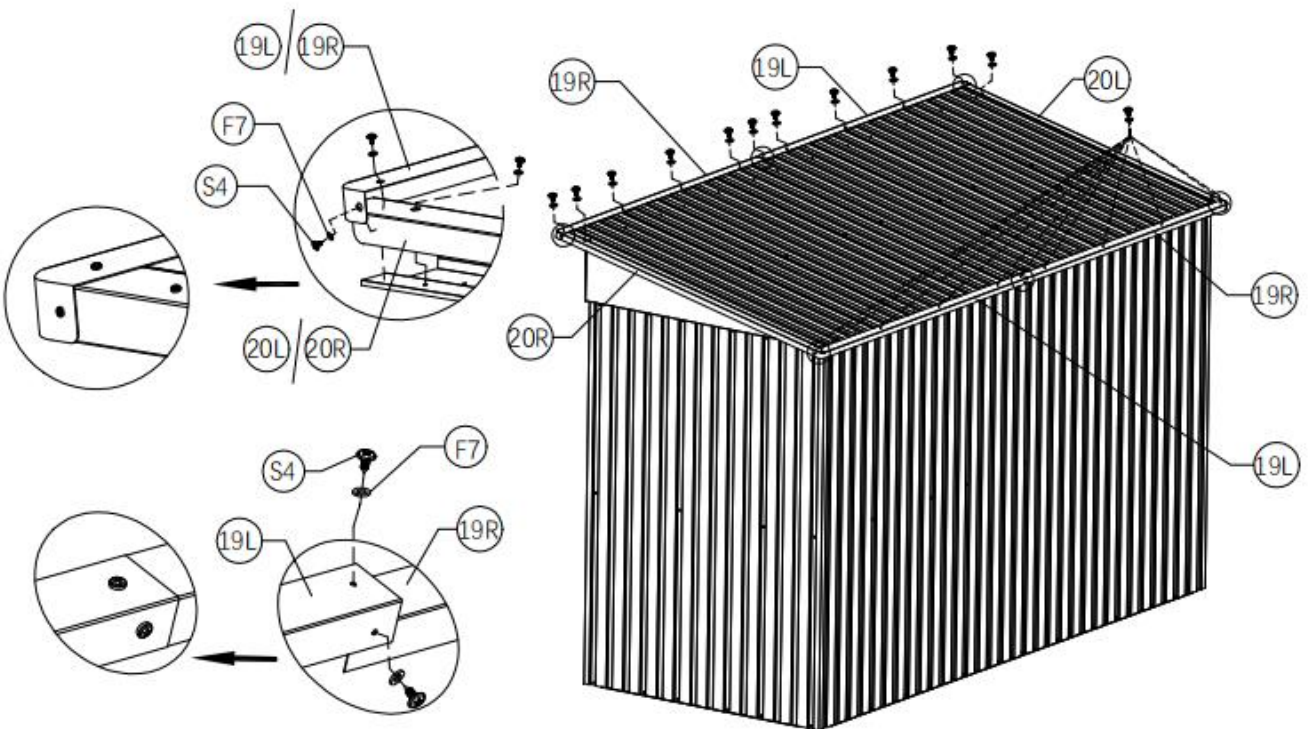

21





D X4



H6 X8



H7 X8

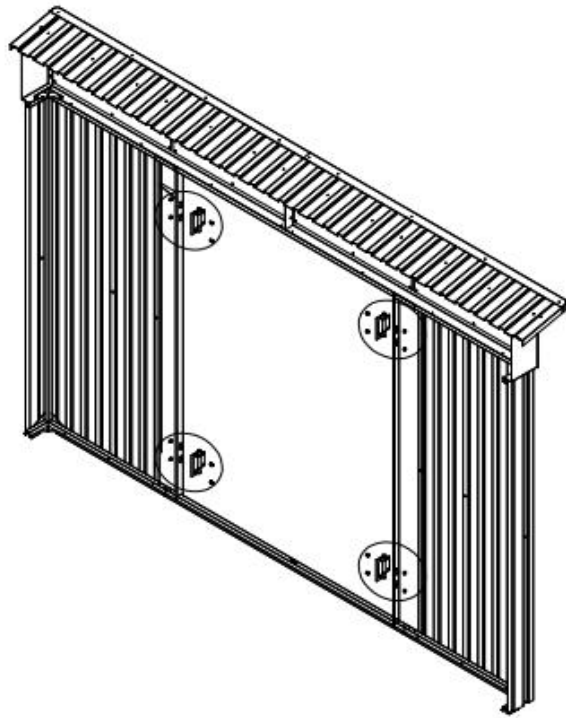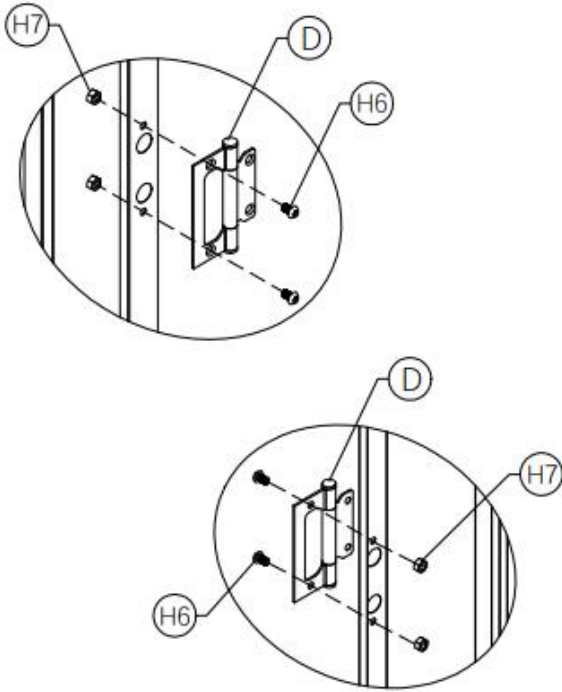

22



16 X1



22 X1



21 X2



M1 X1



15 X2



K X2




S5 X2



S1 X1




S3 X22






S6 X16


S7 X16

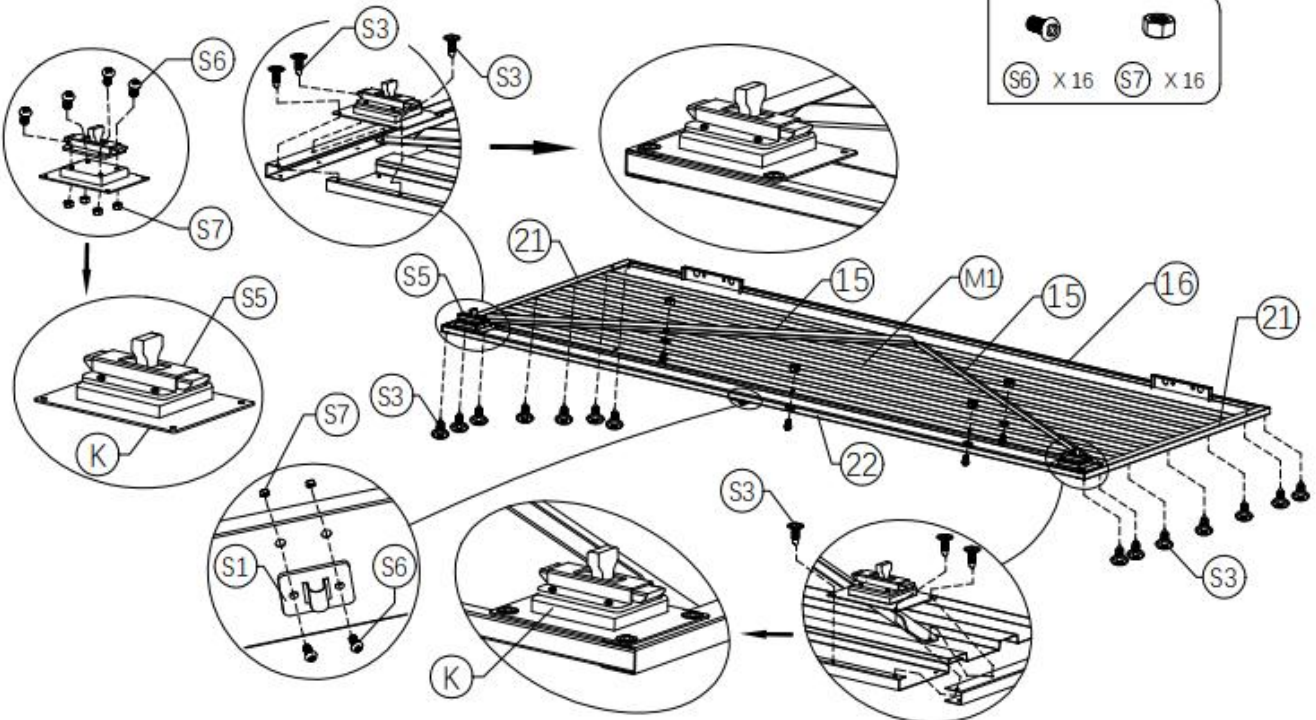

25

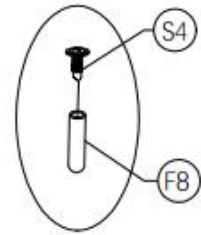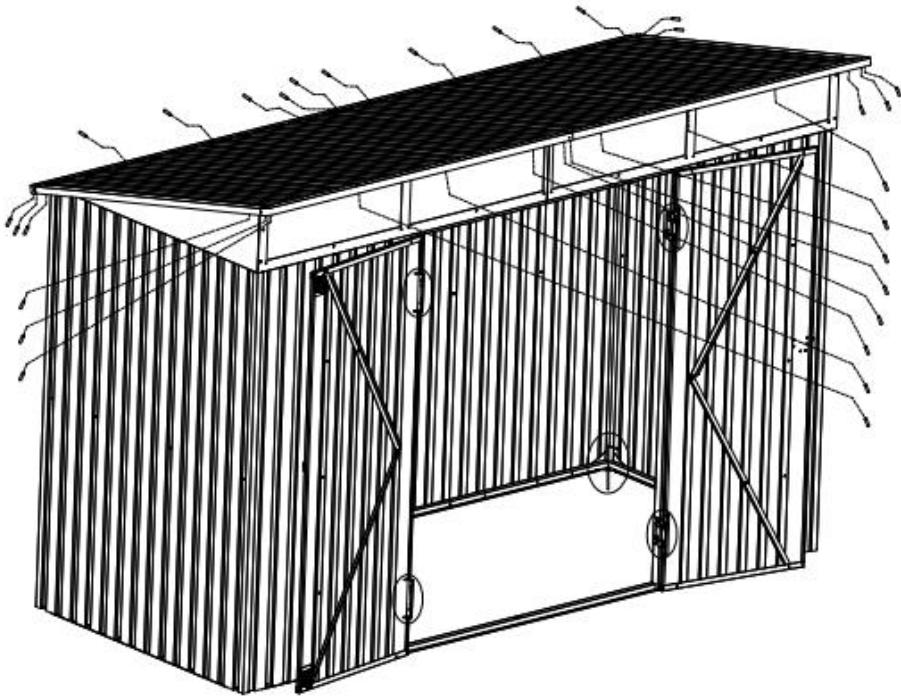

26

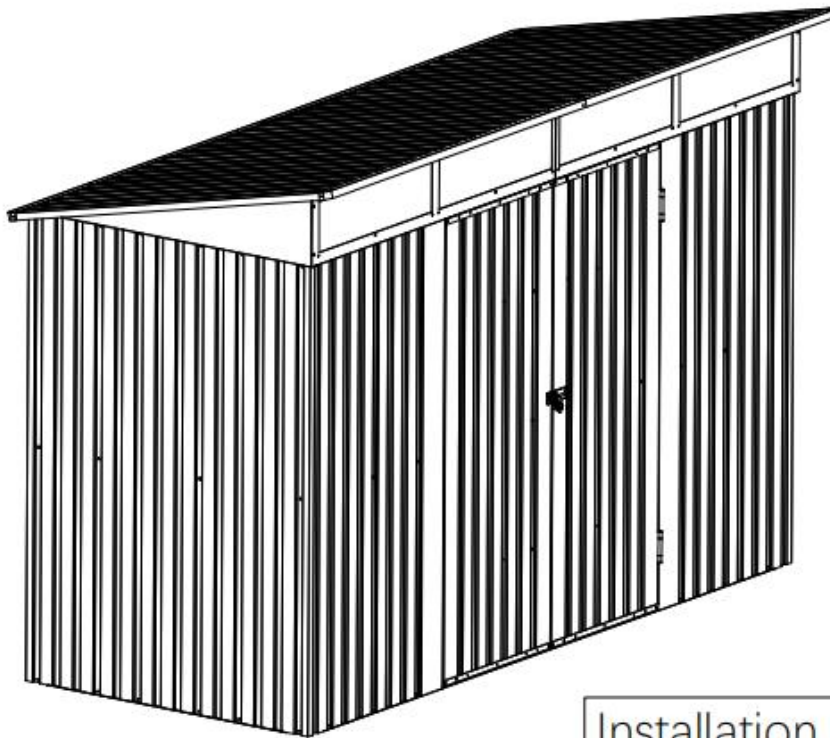

Installation Completed